

 


Bell & Howell Projector Model 253 AX

Powercord Replacement

Replacement for a Bell & Howell 16 mm film projector power cord.


Written By: errolsayre

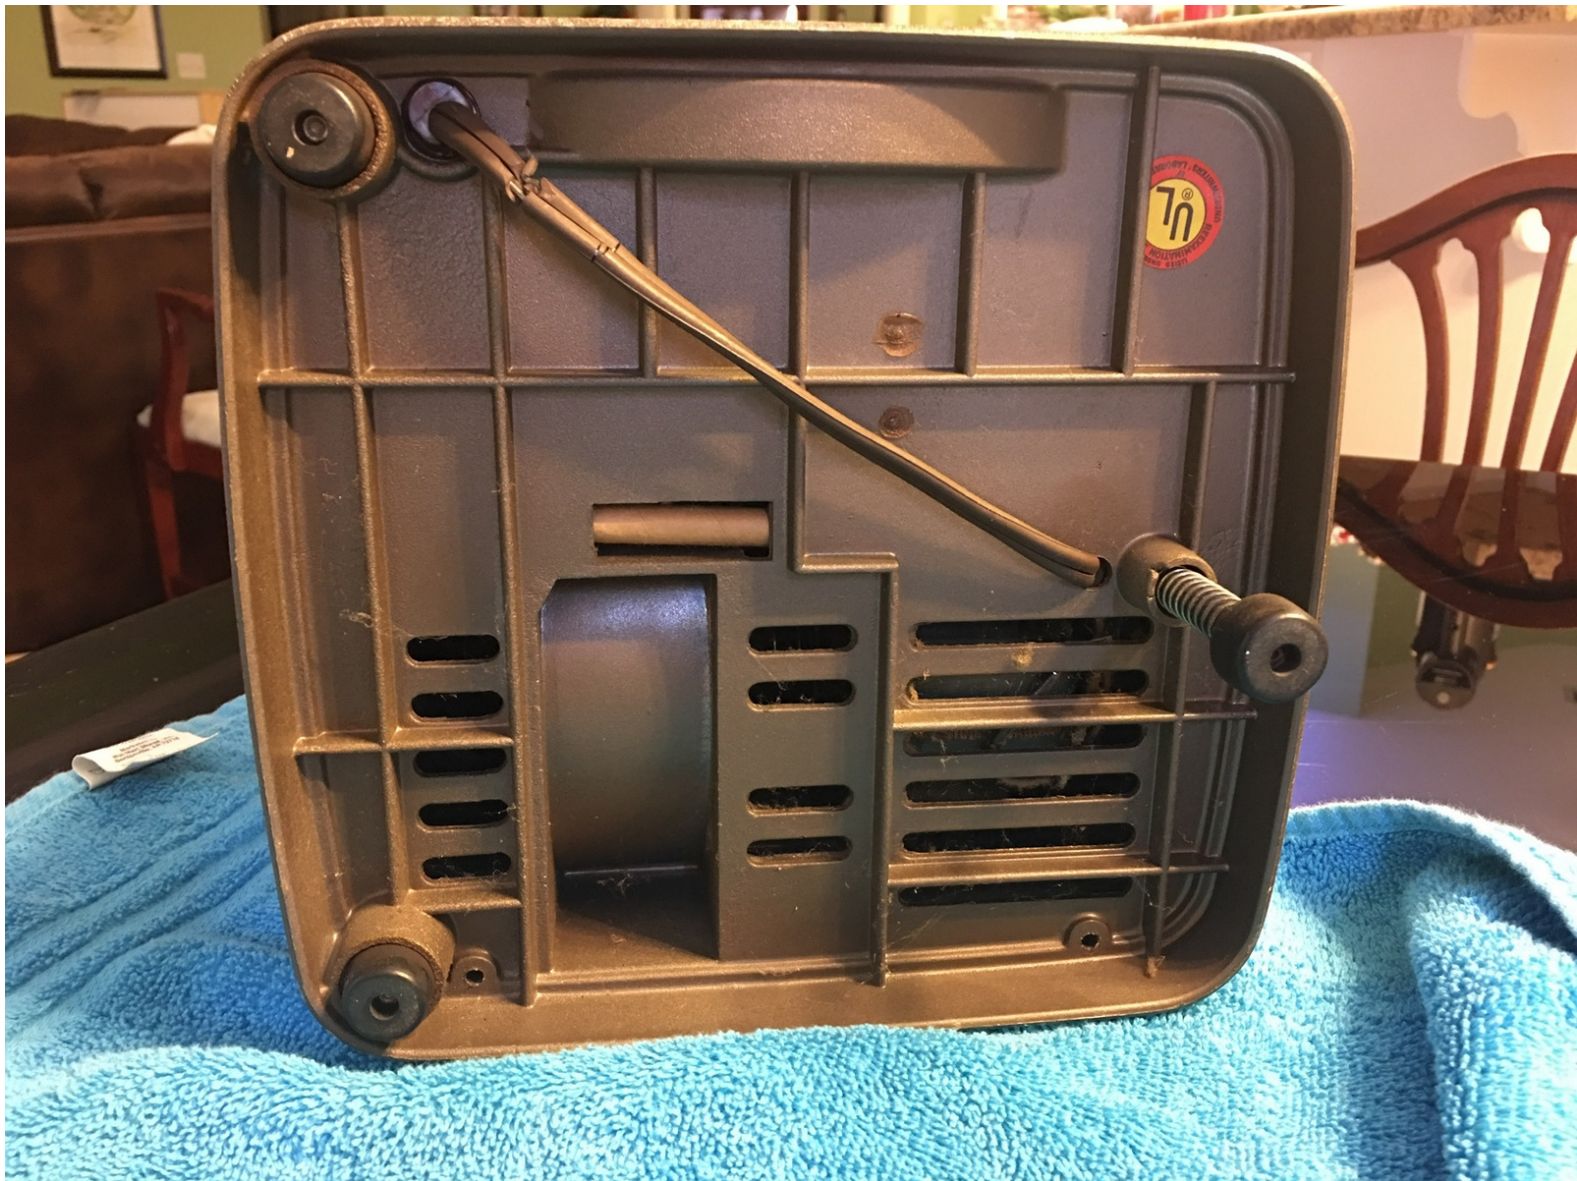

INTRODUCTION

Replacement for a Bell & Howell 16 mm film projector power cord.

Step 1 — Opening bottom case

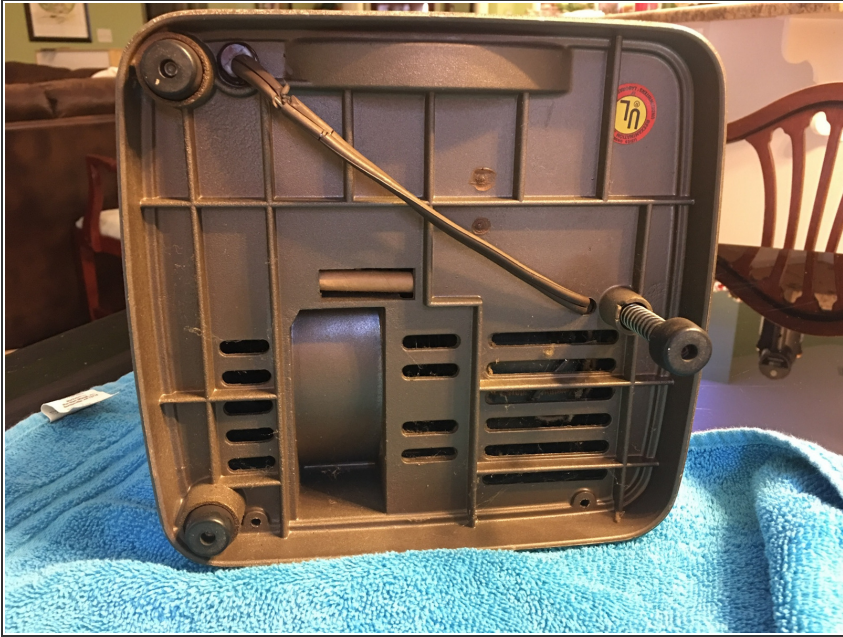

- Two standard screws on the bottom

Step 2 — Remove top case



- remove the four standard screws on each side
- remove the nut from the toggle switch
- loop the drive belt off the shutter wheel
- lay the central armature to the side

Step 3 — Replace the cord



- You can either desolder/resolder connections or cap a new wire on. Either way, ensure you run the new cord through the base down the larger hole and up the smaller.

To reassemble your device, follow these instructions in reverse order.

This document was last generated on 2017-06-17 05:59:23 PM.